



# Model No. 4

Item No.	Part No.	Description	Number
1	2A3&4-4	Ring Gear Assembly	1
2	2F-4	Saddle Arm	2
3*	13C-4	Cuboid Spacer	4
4	2E-4	Saddle Spacer Stud	2
5	27-1-6	Boomer	1
6	24-3-6	Boomer Spring	2
7	20-4	Boomer Chain	1
8	21	Boomer Strap Snap	1
9	2C-4	Back Saddle Ring	1
10	18A-4	Double Bearing Bracket Assembly	2
(Consists of Item Nos. 14, 15, 16, 17, 18, 19, 21, 28)			
11	17A-4	Single Bearing Bracket Assembly	2
(Consists of Item Nos. 18, 20, 27, 28, 32)			
12	12B-4	Side Roller Chain	2
13	12A-4	Top Roller Chain	1
14	14-4-6	Sprocket	2
15	10-4-30	Crank Gear	2
16	8-3-6	Crank	2
17	8C-4,5-6	Crank Pinion	2

Item No.	Part No.	Description	Number
18	26-4-6	Bearing	12
19	8A-4,5-6-8B-5-6	Gear Axle	2
20	12-4-6	Sprocket (Double)	2
21	18-4	Double Bearing Bracket	2
22	1-R	Torch Arm	1
23	7F	Knob and Cam Assembly	1
24	7CS	Torch Holder	1
25	6	Base for 5C	1
26	5C	Torch Carrier Assembly	1
27	17-4	Single Bearing Bracket	2
28	9-4-6	Pinion Gear	4
29	29A-4	Side Tie Rod	2
30	29-4	Tie Rod	1
31	2D-3-30	Boomer Strap Eye	2
32	8B-4	Pinion Gear Axle	2
33	30-4	Boomer Assembly	1
(Consists of Item Nos. 5, 6, 7, 8)			
34	25	Boomer Hook	1
35	16-3-30	Foot	2

\* Cuboid Spacers are used on all Model No. 4 Machines with SN#67553-C26 and up. For all other machines, unless modified with new saddle arms, old-style spacers will be required. Order part #36-4 Spacer Bolt Assembly which consists of four spacers each for 22", 24" and 26" nine